

HEX CODE	FUNCTION	DESCRIPTION
00FF		CINIOS Remote Code
00	POWER ON/OFF	Remote Button
46	TV/AV	Remote Button
4F	TIMER	Remote Button
47	MUTE	Remote Button
15	DISPLAY	Remote Button
49	LR	Remote Button
1	SOUND	Remote Button
17	PICTURE	Remote Button
1A	TTX	Remote Button
44	▲	Remote Button
3	FAV	Remote Button
4E	EPG	Remote Button
18	◀	Remote Button
1D	OK	Remote Button
11	▶	Remote Button
48	SUBTITLE	Remote Button
1B	MENU	Remote Button
45	▼	Remote Button
1E	INFO	Remote Button
4A	DTV-MENU	Remote Button
7	1	Remote Button
8	2	Remote Button
9	3	Remote Button
0A	4	Remote Button
0B	5	Remote Button
0C	6	Remote Button
0E	7	Remote Button
0F	8	Remote Button
19	9	Remote Button
16	0	Remote Button
1F	-/--	Remote Button
2	<PREV CHL>	Remote Button
10	◀ VOL UP	Remote Button
12	▶ VOL DOWN	Remote Button
14	▼ CHL	Remote Button
13	▲ CHL	Remote Button
40	▶	Remote Button - USB Programs
41	■	Remote Button - USB Programs
42	◀◀	Remote Button - USB Programs
43	▶▶	Remote Button - USB Programs
4	RED	Remote Button - USB Programs
5	GREEN	Remote Button - USB Programs
6	YELLOW	Remote Button - USB Programs
0D	BLUE	Remote Button - USB Programs